




# Cashmaster Sigma 105

## Quick Start Guide

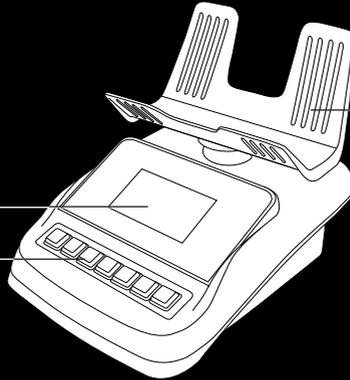

Tray

### Keypad

**COINS / BILLS** - Used for selecting coins, bills or rolls

**ON/OFF** - Press to Switch machine on/off

**UP and DOWN** - Used to select required denominations




**CLEARING / ADDING** - Used for clearing values and adding to totals

**FUNCTION** - Used to access various functions

**PRINT** - Press once for a print out of the totals

### Screen

Auto Scroll  
Battery in use  
Denomination  
Coins / Bills  
Selected currency  
Total / Bank indicator

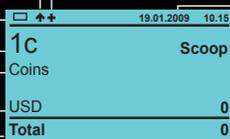

Auto Add  
Date  
Time  
Scoop / No. of pieces  
Sub total  
Running total

### Fast Key Functions

**Auto add**  
Press and hold the 'F' key and press the 'PLUS (C/+) key. This will toggle Auto Add state. " + " will be displayed on the screen when Auto Add is on.

**Auto Scroll**  
Press and hold the "F" key and press the "DOWN" key. This will toggle AutoScroll state. An upward arrow will be displayed on the screen when AutoScroll is on.

**Switch Currency**  
Press and hold the "UP" and "DOWN" keys together. This will toggle between the different currencies set on your Cashmaster.

**Bank On/Off**  
Press and hold down the 'F' key and press the "UP" key. This will allow Bank mode to be activated or deactivated.

**Bank Setting**  
Press and hold down the 'F' key and press the "Coins/Bills" key. This will allow you to set the Bank amount.

**Calibrate Scoop**  
Press and hold down the "F" key and press the 'ON/OFF' key and follow the onscreen instructions.

## Getting Started

1. Place the Cashmaster on a firm even surface, ensure the tray is empty, press  key.
2. Place empty scoop on scale. *If prompted to do so.*
3. You are now in count mode.

## Loose Coins



Ensure that the display indicates coin counting mode.

Press either   key to select note counting mode and required the denomination.

1. Place all coins of your selected denomination in the scoop and onto the tray.
- 2a. If auto-add is on, remove the scoop from the tray, *and advance to the next denomination.*
- 2b. If auto-add is off, press the  key to add to total, remove the scoop *and advance to the next denomination.*

## Rolled Coins



Press to select Rolled coins mode

Ensure that the display indicates Rolled Coins counting mode.

Press the coins/bill  key to select Rolled Coins counting mode.

1. Place a roll of coins on the tray.
  - 2a. If the roll is "full" the Cashmaster will display the value. *Go to step 3*
  - 2b. If there is "crossover" or the roll is not "full". You must then select the denomination of coin using the  . Press the  key to confirm. *Go to step 3.*
  - 3a. If auto-add is on and the roll is "full" the cashmaster will automatically add to total.
  - 3b. If auto-add is on, and the roll is not full, press  key to accept and add total.
  - 3c. If auto-add is off, press the  key to accept the value and add the grand total. *Advance to the next denomination.*

## Loose Bills



Ensure that the display indicates bill counting mode.

Press either   key to select note counting mode and required the denomination.

1. Place bills of the selected denomination on the tray (up to 30 at one time). Repeat until all bills in denomination are on the tray.
- 2a. If auto-add is on, remove bills from the tray.
- 2b. If auto-add is off, press  key to add to total, remove the bills and advance to the next denomination.

*Advance to the next denomination.*

 Customer Support (Toll Free): 1 - 877 - CASHMAS

[www.cashmaster.com](http://www.cashmaster.com)